
IR100 Infrared sauna

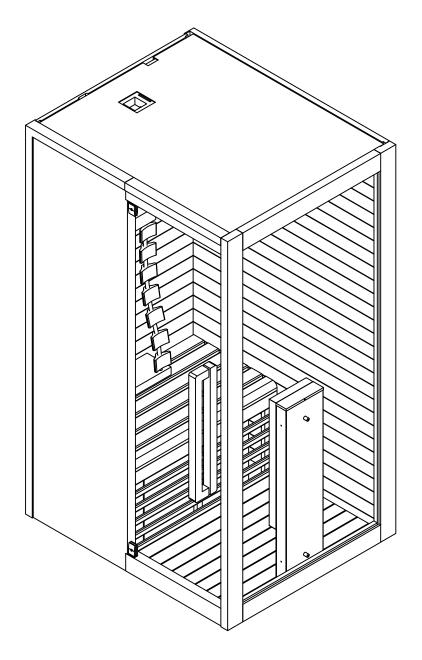

SIZE(mm):1000*1200*2000

PREFACE

Thank you very much for purchasing our product.

Please read this manual carefully before assembling and save it afterwards. Please write down the control box serial number of the cabin as this number will be required in case of repair or order of spare parts.

ATTENTION

Installation and repair should only be done by a qualified electrician!

Check power supply rating and make sure the grounded outlet is correctly connected before installation.

Use original parts only. Do not share the outlet with any other appliances.

When not in use, turn off the cabin's power unit.

Locate your cabin indoors and on a flat, level and dry surface. A protective cover for the Sauna is required.

DANGER

Covering the heaters causes a fire hazard due to overheating. Do not cover the heaters!

Keep flammable or easily combustible materials/objects (eg.towels) away from the heater at all times.

Do not touch the heater during and shortly after use as a burning hazard exists due to hot parts.

The light bulb heats in use. If the bulb needs to be changed, unplug the cabin and let the bulb cool down before changing it.

Should the electrical connection get damaged, it must be replaced-either by the manufacturer or by a licensed electrician!

WARNING

If you suffer from illness or other health-related problems, especially heart conditions or circulatory disturbances or if you take medication, you should consult a doctor before using the Sauna.

Children and frail persons should never be in the cabin without supervision.

If you feel uncomfortable while using the Sauna, stop immediately and consult with your doctor.

Never go to a hot Sauna if you have taken alcohol, strong medicines or narcotics.

Technical data

Model		IR100						
Cabin r	naterial	Thermo Aspen+Black Veneer						
Depth		1200mm						
Width		1000mm						
Height		2000mm						
Voltage		AC230V						
Radiators	Туре	Tube Radiator+Carbon Heater						
	Total output	1195W 5.2A						

Hardware parts (variations possible)

					1									\triangle	
Ø4x30	Ø4x40	Ø4x50	Ø4*16	Ø3*16	Ø3*12	Ø8x60	Pad	Сар							
8x	2x	8x	34x	8x	4x	2x	2x	2x	4x	2x	1x	8x	2x	2x	4x

ASSEMBLE INSTRUCTIONS

Assemble tips

Please remove transport packaging and inspect that your infrared cabin has been delivered complete and


intact before beginning assemble.


A least 2 persons are required for assemble of the cabin.


Please check the countersink and hole diameter of the drill holes to avoid damaging the wood.


The minimum room height required for installation is 2020mm


Tools

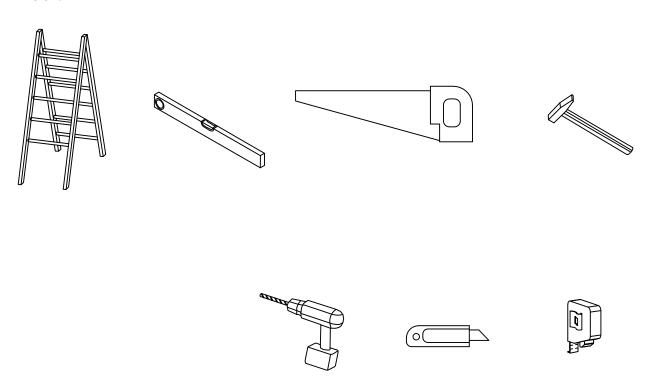


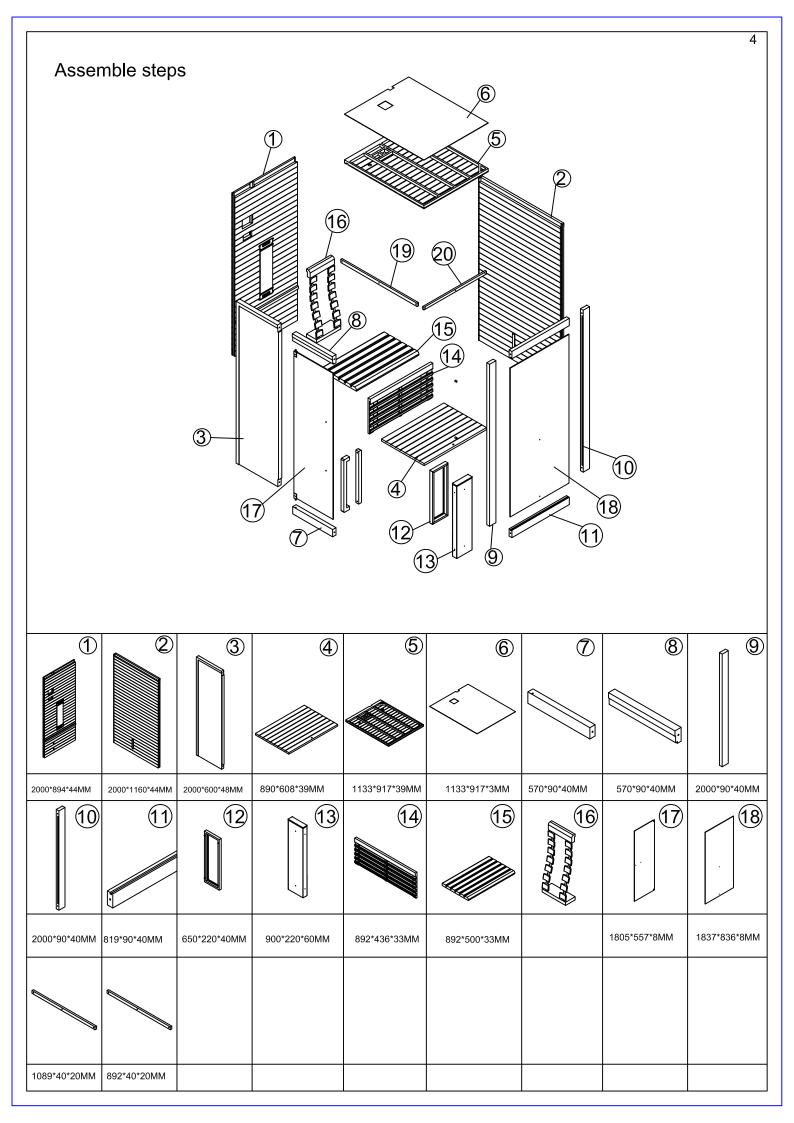

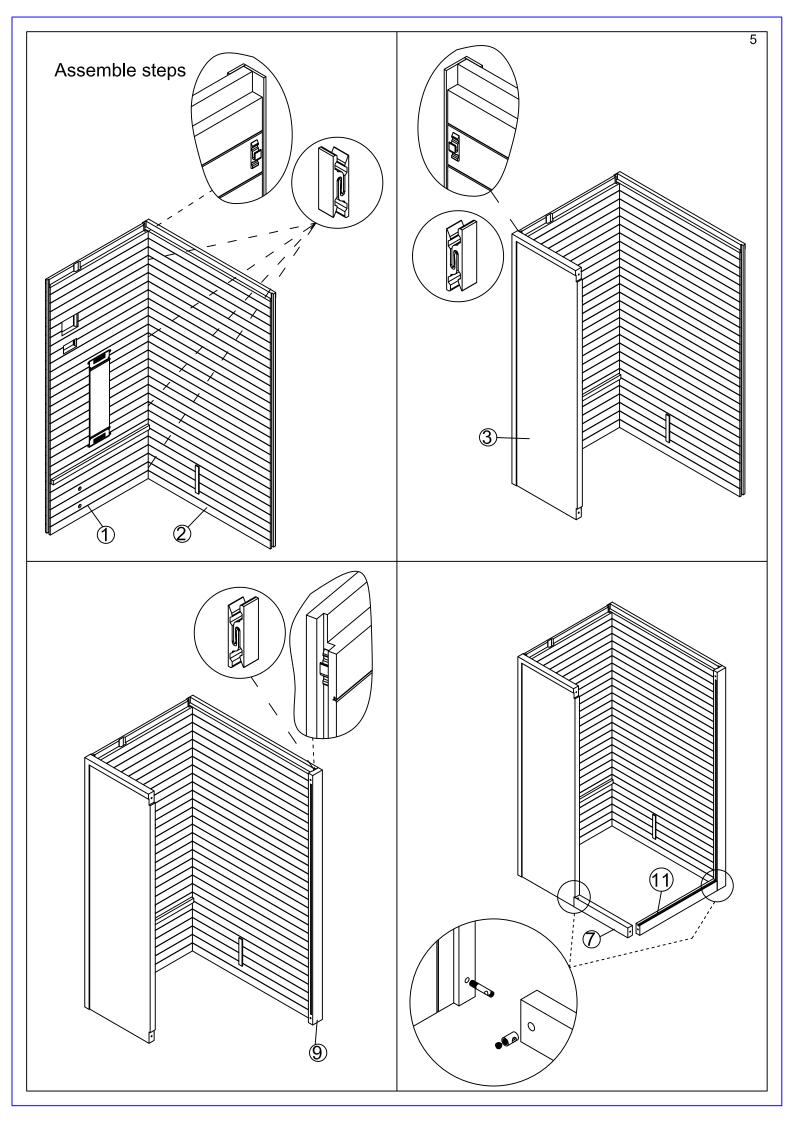


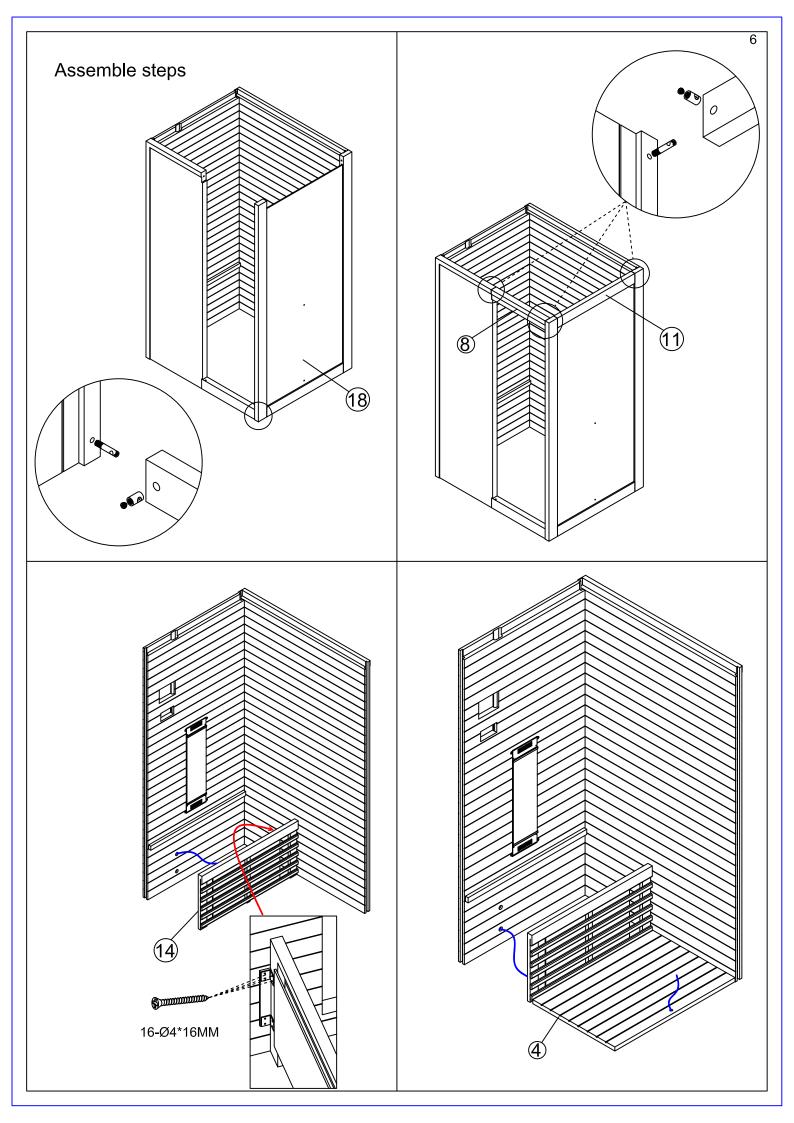

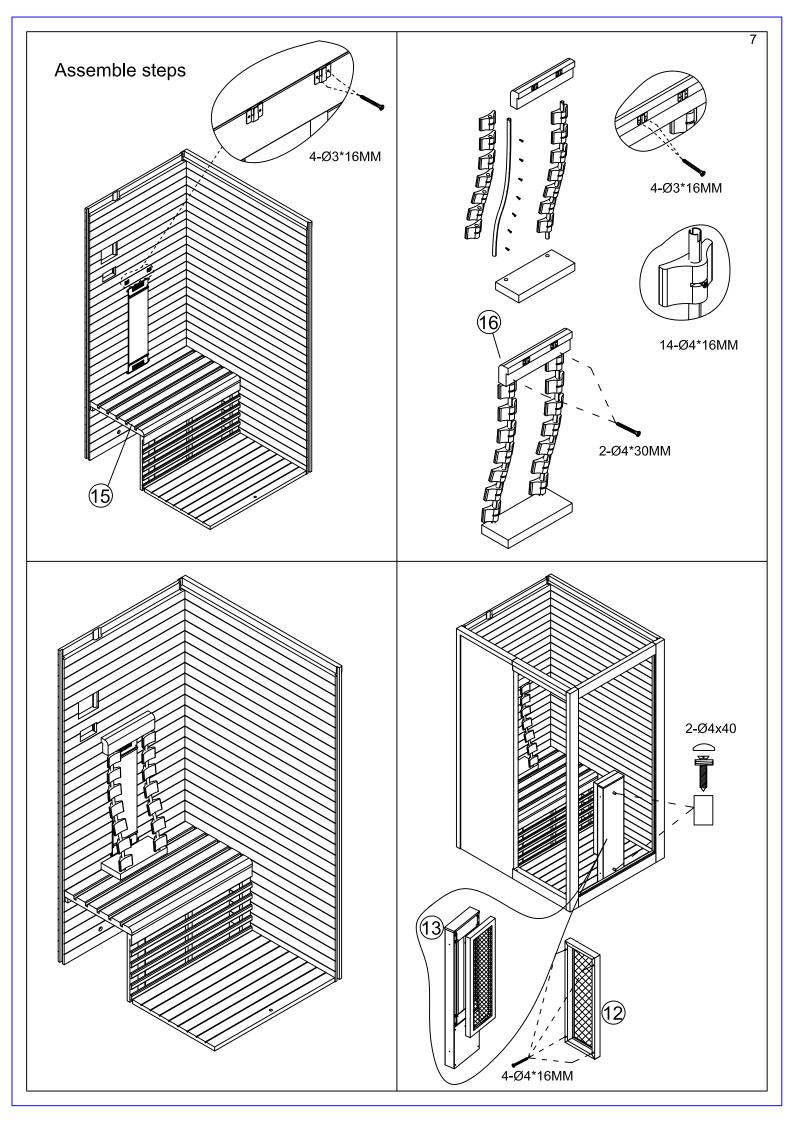


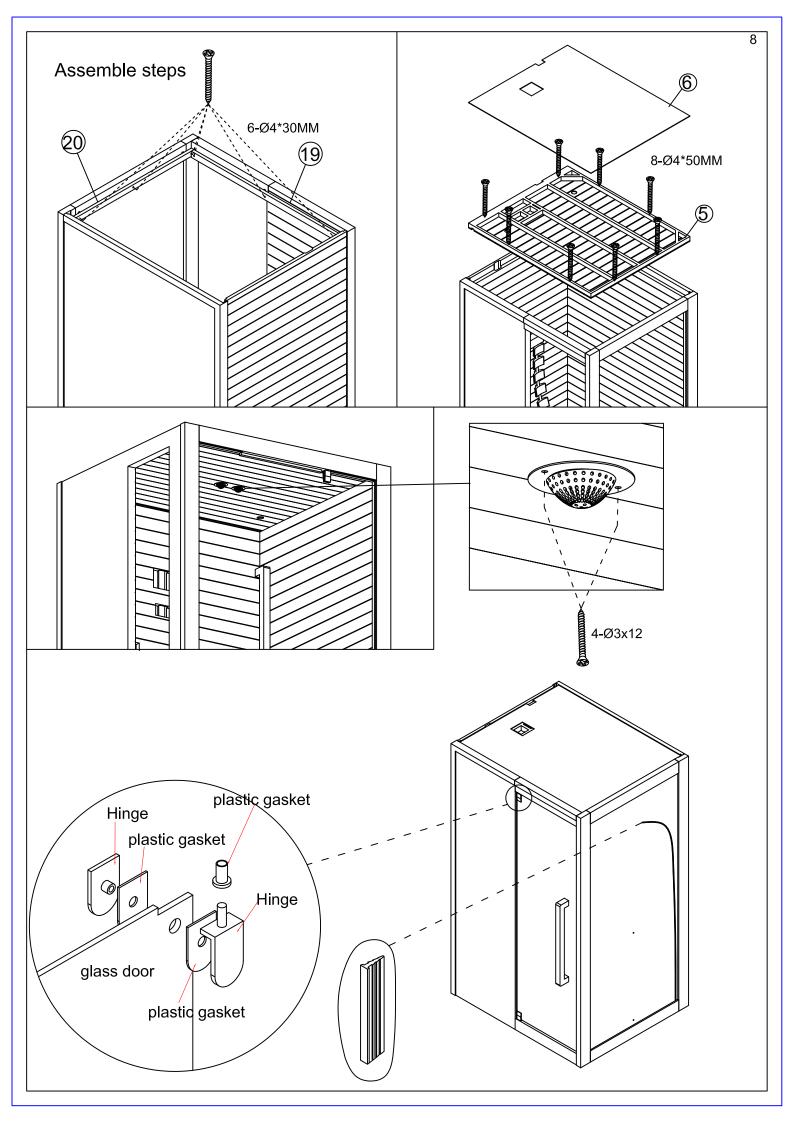


Assemble steps

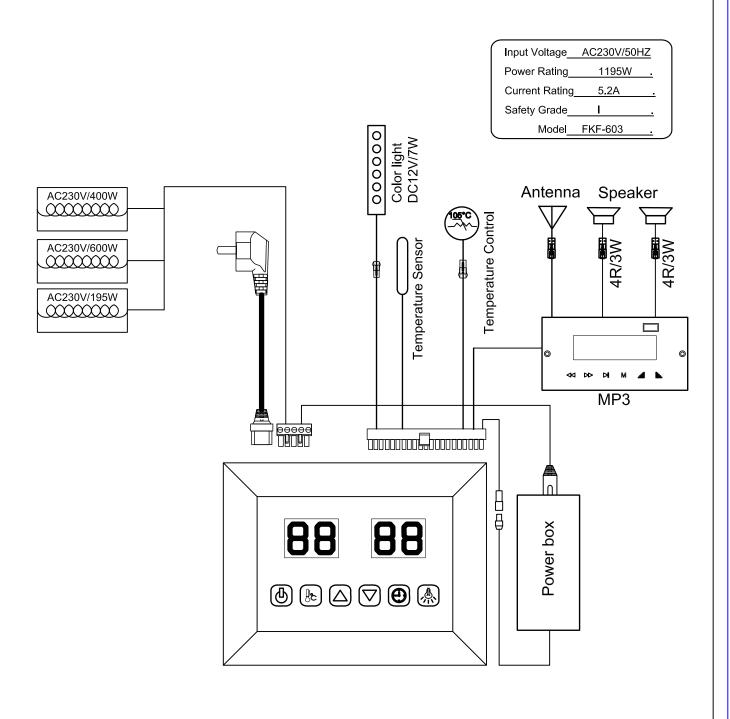

OPERATING INSTRUCTIONS

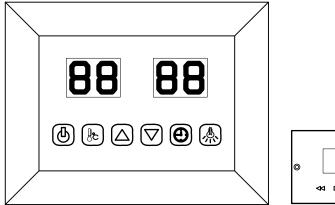

 

Connect the power unit to wall outlet, the LED indicator will start to blink on the display. Now it is possible to switch on the infrared heaters, the light and the music function.

1)Startup

Press to switch on the display and heaters start to work, the length of time is automatically set to 99 minutes and the air temperature inside the cabin will be presented. Press again could switch off the heaters.

2)Temperature settings

The left display refers to the air temperature. Press $\textcircled{\cite{le}}$, you can set the desired temperature from 35 to 60 by pressing the \triangle/∇ keys,Interval=1; The setting number blinks 10 seconds then automatically presents

the air temperature; When at this temperature, the heaters will stop working automatically; When it fall 4 below this temperature, the cabin will start up automatically.

Please note: The maximum air temperature reachable in the cabin may be lower than the desired temperature. This is dependent on the temperature outside the cabin. Default temperature=40

3)Time settings

The right display refers to the length of time. Press ⊕, you can set the desired time from 5mins to 99mins by pressing the △/∇keys; Interval=1mins; When count down to 00, the heaters will shut off automatically. Default time=99minutes.

4)Color light

Short press ,you can set the desired color(7 color totally) and close the light; Long press to go into an automatically cycling mode, changing 7 colors every 5 seconds.

OPERATING INSTRUCTIONS

5)Mp3 player

Activate the MP3 player by pressing and holding the " M " button on the MP3 player. Select the preferred mode with brief repeated presses of the " M "button on the MP3 player.(USB, MMC CARD,Bluetooth,FM radio)

USB/SD or Bluetooth mode:

You can select songs by short pressing the ◄ / ► keys and adjust the volume (0-32) by long pressing the ◄ / ► keys. The ► key for pause.

FM radio mode:

Long press ► to search stations (87.5MHZ-108MHZ) automatically, the system will save all of them; You can select stations by short pressing the ◄ / ► keys and adjust the volume (0-32) by long pressing the ◄ / ► keys.

SERVICE

Use instructions

Drink plenty of liquids before and after use of the infrared cabin.

Dry yourself off completely.

The optimal cabin temperature for a pleasant session lies between 35 and 40.

After a heating period of an hour at the latest, the cabin should be switched off and a heating brake of at least 30 minutes should be taken.

It is recommended to take a warm shower and relax after use.

Maintenance instructions

Clean the cabin with a damp cotton towel, dry with a clean dry towel.

Clean the glass with a window/glass cleaner and a soft cloth.

Do not pour water in the control panel or clean it with wet cloth. For cleaning purposes, use a cleaning

cloth that has been only slightly moistened with a mild soapy solvent (dish detergent).

Do not use chemical detergents to clean the cabin.

Please fasten the screws of the bench once every three months, avoid the loose or drop off.

SERVICE 12
Use instructions
Drink plenty of liquids before and after use of the infrared cabin.
Dry yourself off completely.
The optimal cabin temperature for a pleasant session lies between 35 and 60 $^\circ \! \mathbb{C}$.
After a heating period of an hour at the latest, the cabin should be switched off and a heating brake of
at least 30 minutes should be taken.
Maintenance instructions
Clean the cabin with a damp cotton towel, dry with a clean dry towel.
Clean the glass with a window/glass cleaner and a soft cloth.
Do not pour water in the control panel or clean it with wet cloth. For cleaning purposes, use a cleaning
cloth that has been only slightly moistened with a mild soapy solvent (dish detergent).
Do not use chemical detergents to clean the cabin.
Please fasten the screws of the bench once every three months, avoid the loose or drop off.
It is recommended to take a warm shower and relax after use.
Notes: